

MAVOSYS 10 - Switchgear Mount Version Modular System for Power Quality, Demand & Energy Monitoring

3-349-504-03 1/9.14

THE INTELLIGENT INSTRUMENT

True to its three decade legacy as the industry leader in power quality analysis, GOSSEN-METRAWATT proudly introduces MAVOSYS 10 Series, the next generation of permanent monitoring system for power quality, energy and demand, and process monitoring. MAVOSYS 10 family of DataNode's have a configurable design that allows users to specify the right instrument configuration for their specific application. All this flexibility in one instrument, combined with the multi-user web interface of Encore Series Software and available local ½ VGA color touch screen display, truly make MAVOSYS 10 Series the right product for your application.

GROUNDBREAKING INNOVATION

MAVOSYS 10 DataNode's are the first truly modular and configurable instruments to shatter the traditional 8-channel (4 voltage/4 current) instrument format. Now you can have your choice of (4 channel) voltage, (4 channel) current and (8 channel) digital input modules. You will save money, prevent integration aggravation and gain physical space by combining up to four modules in one instrument for applications that previously required two or more instruments. Popular combinations are:

- 8 channel traditional power and PQ monitoring:
 - 1 Voltage & 1 Current module
- 16 channel equipment performance (I/O) monitoring:
 2 Voltage & 2 Current modules
- 16 channel substation feeder monitoring:
 - 1 Voltage & 3 current modules



Available with or without a color display, the MAVOSYS panel mount design is ideal for switchgear applications

The MAVOSYS 10 DataNode enables you to combine modules in software to build your own instrument with up to four virtual analyzers. Virtual analyzers are either individual modules working as independent analyzers or combinations of modules such as when combining Voltage & Current modules to create a power quality, demand & energy analyzer.

COMPLIANCE

MAVOSYS 10 Series is perfect for ongoing monitoring to determine compliance with world-wide standards such as EN50160 and your own specialized compliance requirements. Encore Series voltage modules are certified by an independent laboratory for Class A compliance with IEC61000-4-30. You can be confident that MAVOSYS 10 Series measurements are accurate and repeatable and that they meet the most stringent requirements.

MAVOSYS 10 FAMILY DATANODES

Available in both standard and switchgear mount enclosures, the MAVOSYS 10 family of DataNode's can be used in a wide variety of applications. The switchgear version is available with a ¼ VGA color touch display (61SGD) or without display (61SG). The standard enclosure (61STD) is a stand alone instrument available with a rack mount (with or without ¼ VGA touch display), wall mounting brackets and weather resistant enclosures to meet the most severe operating environments.

Choose the appropriate mainframe then add the modules that meet your application.

MAVOSYS 10 - Switchgear Mount Version Modular System for Power Quality, Demand & Energy Monitoring




Voltage Compliance




4 Ch. Voltage Module



4 Ch. Current

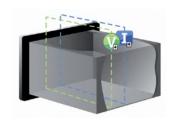


Std Power Quality

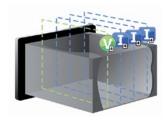

Substation Feeder



8 Ch. Digital Input Module



UPS Performance

MAVOSYS 10 Family DataNode's modular design enables you to build the right instrument for your application.

MAVOSYS 10 SPECIFICATIONS

MODULES - CHOOSE UP TO FOUR

VOITAGE

- Channels: (4) differential inputs, AC/DC
- Sampling: 512 samples/cycle, 16bit A/D, synchronous sampling
- Range: 1-600 Vrms, +/- 1000VPK, Frequency: 16/20Hz, 50Hz. 60Hz
- Full Scale Accuracy: 0-600V 0.1% reading +/- 0.05% full scale, 7KHz bandwidth for low/medium frequency transients. 100-300V AC 0.1% reading for IEC61000-4-30
- Input impedance: 10M Ohm to ground
- Choice of connections: Screw terminals (M819G), safety connectors (M819H), D connector (M819I) for use with (optional) remote pod with screw terminals (M819K).

CURRENT

- Channels: (4) differential inputs, AC/DC
- Sampling 512 samples/cycle, 16 bit A/D.
- Range: Full scale current = 1.5Vrms, crest factor of 3
- Accuracy: 0.1% reading +/- 0.05% full scale, 3KHz bandwidth for low/medium freq. transients. Does not include CT.
- Choice of connections: Screw terminals 1A (M819L) or 5A (M819M), TR connectors (M819N), D connector (M819I) for use with (optional) remote 1A 5 fold overload (M819P) or 5A 5 fold overload (M819Q) or 5A 20 fold overload (M819O).

DIGITAL INPUT

- Chanels: (8), Range: 0 135VAC/DC,
- 1KHZ sampling, Edge or level triggered,
- · Logic programmed by user (active high or active low
- Time stamped to the millisecond
- Screw terminals (M819S)

MEMORY

1GB internal flash

MONITORING COMPLIANCE

- IEC61000-4-30 Class A, IEC61000-4-7, IEC61000-4-15
- EN50160, NVE, IEEE1159, IEEE1453, IEEE519, IEEE1459

COMMUNICATIONS

- Standard: RJ45 TCP/IP Ethernet, RS232/RS485
- Optional: GSM/GPRS modem (Z819D), analog modem
- Protocols: XML, Modbus TCP/RTU
- Time synchronization: NTP, optional internal GPS (M819D)

INSTRUMENT POWER

- Standard: 90 to 250V AC 50/60Hz, 105 to 125V DC
- Optional: 90 to 250V AC/DC, 50/60Hz
- Screw terminals
- 15 minute internal UPS (specified with display & 4 modules)

AVAILABLE ENCLOSURES

- Panel Mount, 186mm x 186mm cutout
- M819C (61SGD): with ¼ VGA color touch display, 12 languages
- M819B (61SG): without display
- Z819I (61RMTSG): rack mount

ENVIRONMENTAL

- Operating temperature: -10 to 60°C
- Humidity: 10 to 95%, non-condensing, Indoor use only

SAFETY

• CE, ISO9001

Edited in Germany ullet Subject to change without notice ullet A PDF version is available on the internet



GMC-I Messtechnik GmbH Südwestpark 15 90449 Nürnberg • Germany Phone +49 911 8602-111 Fax +49 911 8602-777 E-Mail info@gossenmetrawatt.com www.gossenmetrawatt.com